

GEN4



MIDWEST
MACHINERY CO




BOUNDARY TRACK

Selecting Boundary Track on Gen4 Displays.


Gen4 - Boundary Track

Selecting Boundary Track on Gen4 Displays


1 Select Set Track

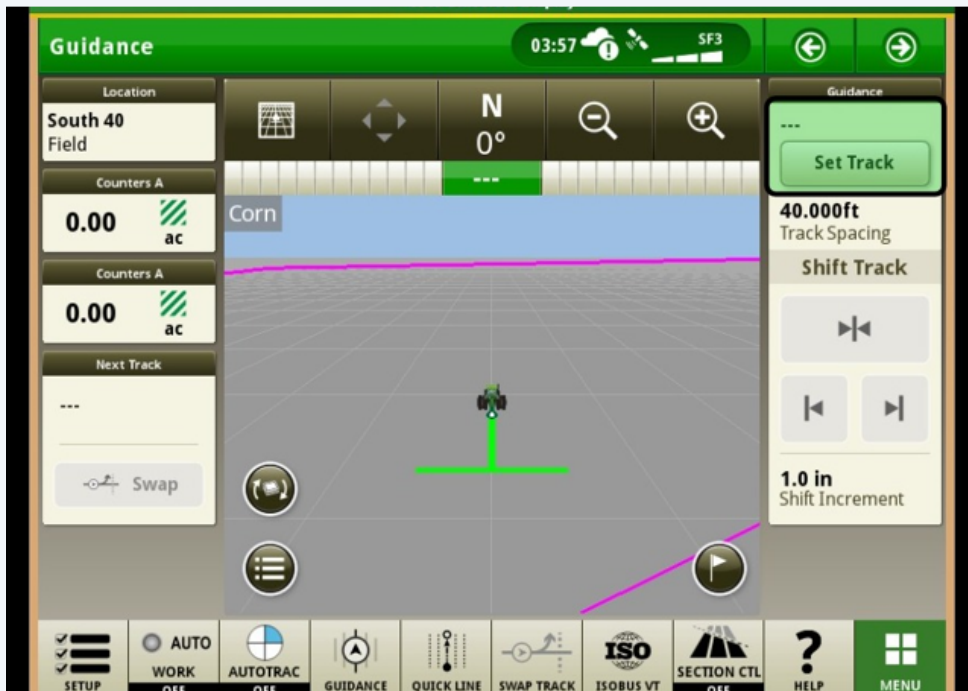


2 Select New Track

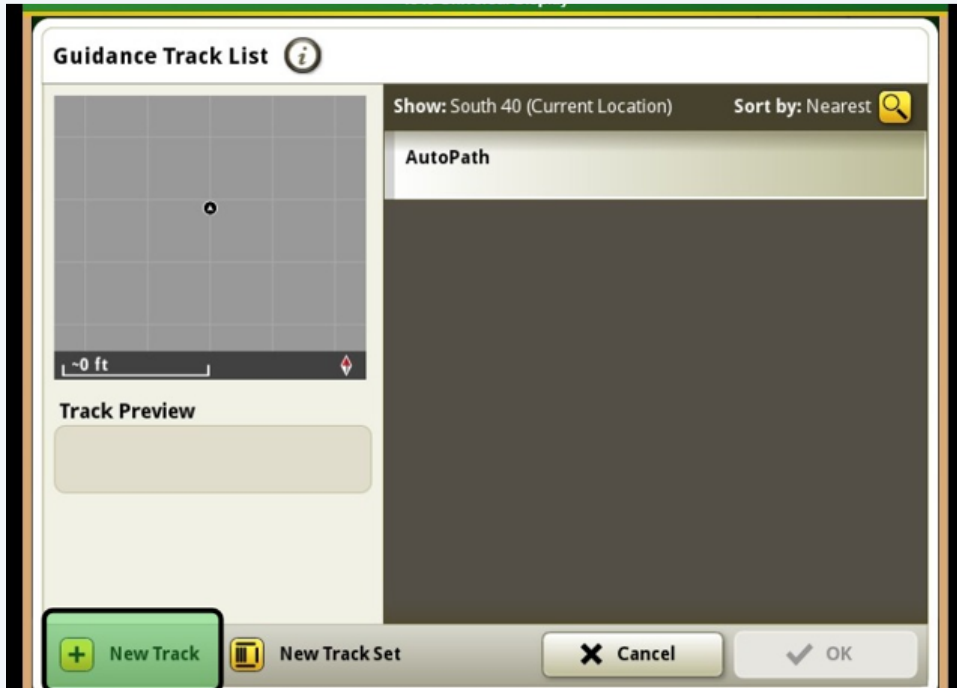


3 Select Boundary Track

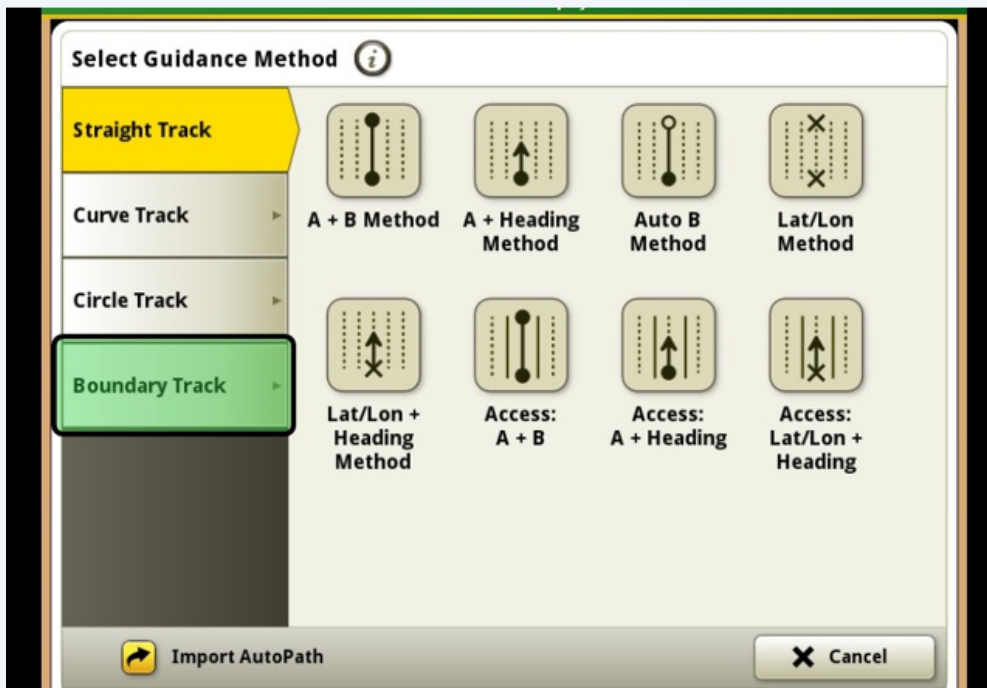


4 Select Boundary Fill

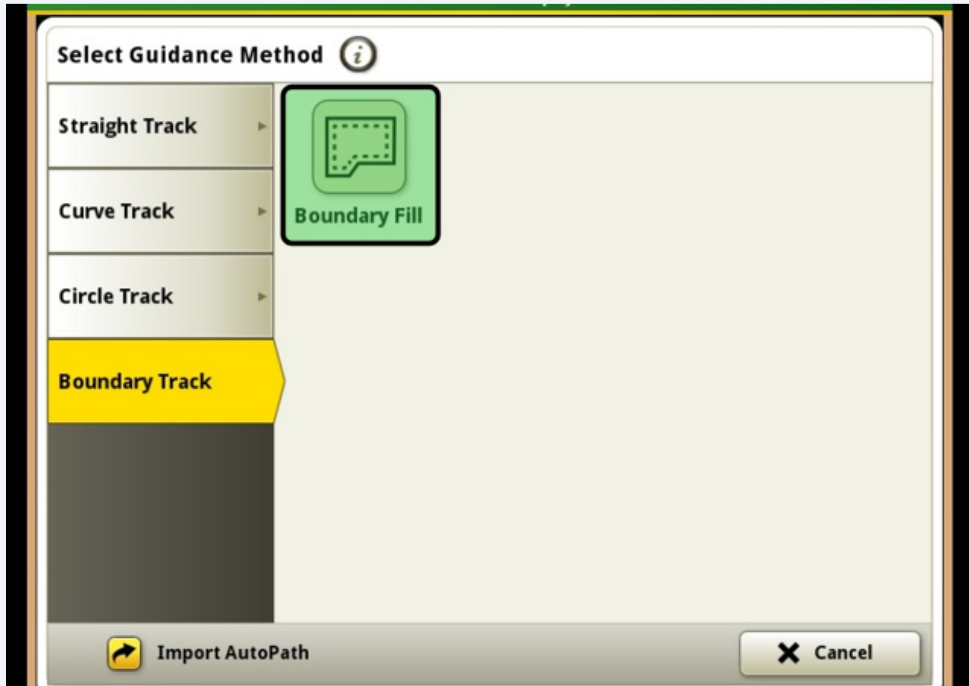

5 Verify Boundary is correct

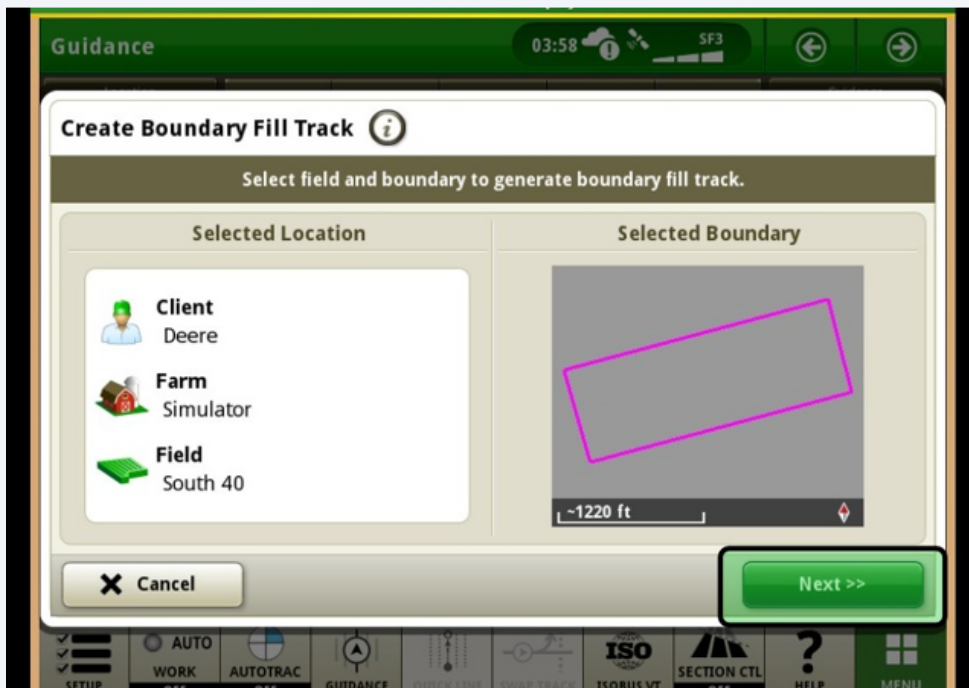

- 6 Name the Boundary Track and select Save

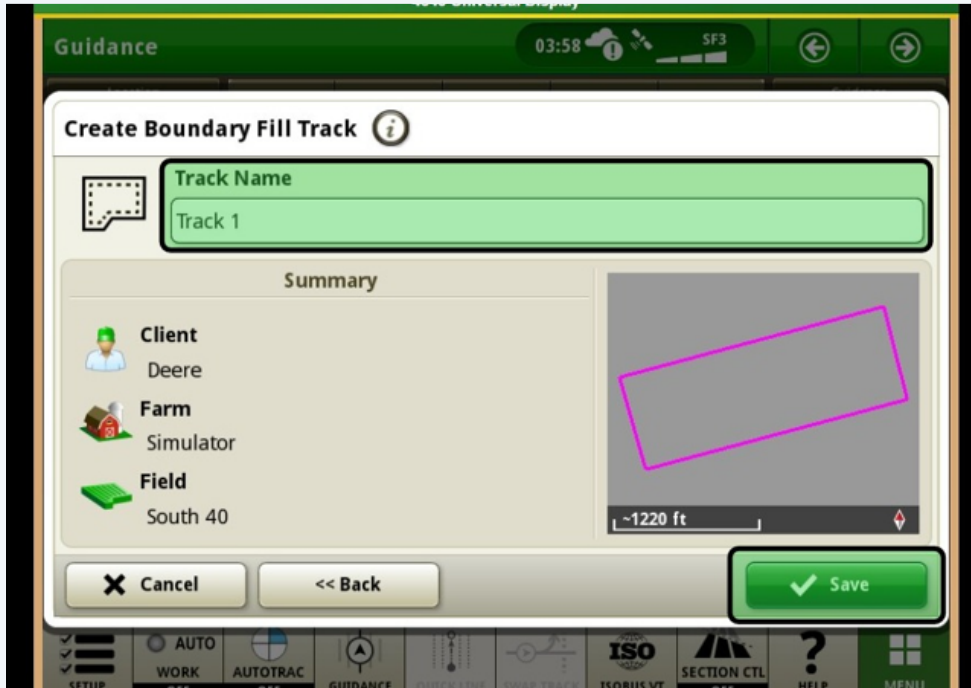

- 7 When returning to the Guidance run page, Operator can now AutoTrac around the border of his field according to his Track Spacing.





Lines will move in and out as the boundary moves in and out.



If customer shift(s) when moving in one direction, all lines will shift around the field. Ex. If a customer is moving east like in the picture in Step 7 and they shift their line left, ALL lines around the field will shift inward. This means that ALL boundary track lines would shift inward.